


# MAP AND DRAWING TOOLS

**Note: Remember right clicking the mouse deactivates many map and drawing tool functions**

## Map Tools

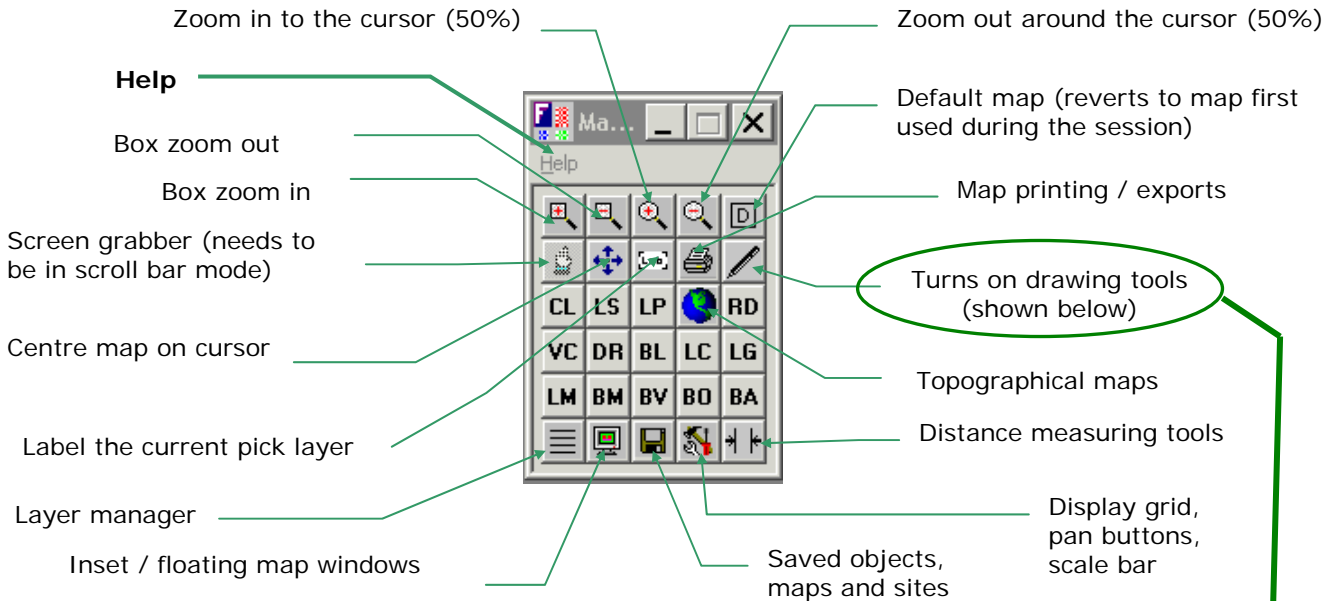

- |                                |   |
|--------------------------------|---|
| <b>CL</b> – create label       | click this, move the cursor to any object, click to label it *    |
| <b>LS</b> – label style        | click this, move the cursor to label, click on it then restyle it |
| <b>LP</b> – label position     | click on this then a label to reposition or rotate it *           |
| <b>RD</b> – road details       | click on a road to add an alternate name, or a locality           |
| <b>VC</b> – view crash         | display the crash details of any crash clicked on                 |
| <b>DR</b> – display roads      | displays or removes the road layer and makes it pickable          |
| <b>BL</b> – browse labels      | browse labels from the current pick layer                         |
| <b>LC</b> – label crash        | labels crash plots with their crash ID's                          |
| <b>LG</b> – legend functions   | reposition or remove any currently displayed legend               |
| <b>LM</b> – label sites        | labels saved site objects   |
| <b>BM</b> – browse site labels | browse saved site labels  |
| <b>BV</b> – browse vector      | displays road name, road type, flow, length and other detail      |
| <b>BO</b> – browse objects     | shows the name and owner of a user object                         |
| <b>BA</b> – browse alias       | similar to BV but lists any alias the road may have               |

\* re-click the button to turn function off

## Draw Tools

